


9.2 HANDPUMP PARTS LIST

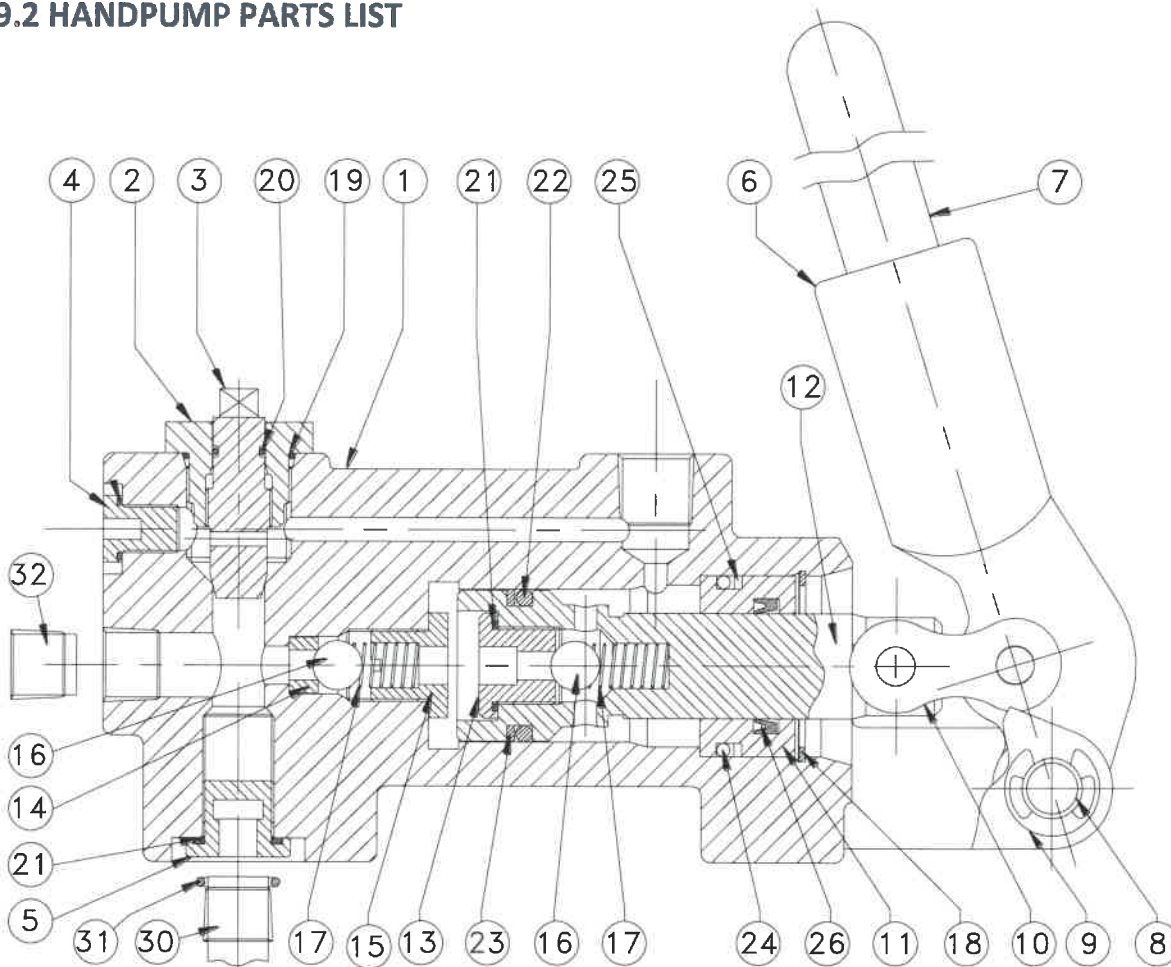

Item	Description	Qty	Part no.
1	Pump body	1	PH20-01
2	Guide bush	1	PH20-02
3	Bleed screw	1	PH20-03
4	Bleed plug	1	PH20-04
5	Tank top plug	1	PH20-05
6	Pivot lever	1	PH20-06
7	Handle	1	PH20-07
8	Pivot pin	1	PH20-08
9	Circlip	2	PH20-09
10	Connecting link	1	PH20-10
11	Piston bush	1	PH20-11
12	Piston	1	PH20-12
13	Outlet valve seat	1	PH20-13
14	Inlet valve seat	1	PH20-14
15	Inlet spring retainer	1	PH20-15

Item	Description	Qty	Part no.
16	Valve ball	2	PH20-16
17	Valve spring	2	PH20-17
18	Circlip (piston bush)	1	PH20-18
19	O-ring (guide bush)	1	PH20-19
20	O-ring (bleed screw)	1	PH20-20
21	Seal (outlet valve seat)	2	PH20-21
22	O-ring (piston)	1	PH20-22
23	Backup ring (piston)	1	PH20-23
24	O-ring (bush)	1	PH20-24
25	Backup ring (bush)	1	PH20-25
26	U-seal	1	PH20-26
30	Standpipe (optional)	1	PH20-30
31	O-ring (standpipe)	1	PH20-31
32	Plug	1	PH20-32

Items 17 to 26 included in seal kit PH20-SK

Items 16 to 26 included in repair kit PH20-RK